


NOTE: During the installation of this product, the only sealant or adhesive that is Manufacturer Approved is a 100% Silicone based product. Failure to use Kitchen and Bath 100% Silicone based products will VOID ALL manufacturer warranties and manufacturer finish warranties. Specifically, the use of Plumbers Putty is EXPRESSLY PROHIBITED and will VOID ALL manufacturer warranties and manufacturer finish warranties.

NOTE: The Oil Rubbed Bronze and Victorian Bronze finishes are living finishes and are simply cared for and cleaned with a mild soap and water. Any use of harsh chemicals found in some cleaning product will damage the finish and void the warranty. The use of liquid plumbing cleaners, bleach and some dental cleaning pastes with whitening agents may also damage these finishes.

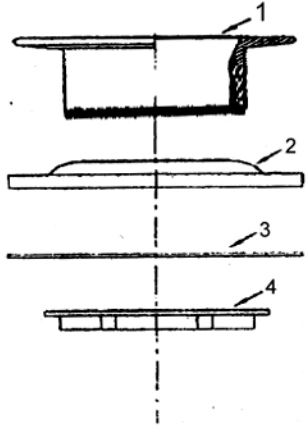

**Model # UM-4414**  
**Model # UM-4415**


MT760-series of Lavatory  
GRID STRAINER DRAIN  
INSTALLATION INSTRUCTIONS

NO	DESCRIPTION	MATERIAL
1.	FLANGE	BRASS
2.	GASKET	RUBBER
3.	FIBER WASHER	FIBER
4.	LOCK NUT	ZINC
5.	TUBE W/O OVERFLOW 1 1/4"OD BRASS 17GAUGE	BRASS

1. Unscrew flange (1) from drain body. Leave large black washer and all parts (2)(3)(4)(5).
2. Put a ring of silicone around drain opening in lavatory sink. Put pipe joint tape on threads end of pipe and insert threaded end of drain body up through drain hole and attach flange to body.
3. Thread up a lock nut(4) from the underside of the lavatory sink until the black rubber(2) washer is seated securely inside the opening of the lavatory sink. Tighten up locknut carefully wipe excess putty from around the edge of flange. Tighten lock nut(4)with a wrench.
4. Water test the entire installation by plugging the strainer with a small towel and lock for leakage. Please note: The leakage by the stopper is allowed. 3.78L/h at a pressure of 152mm(six in")water column, when closed
5. Tighten up at related connections

NOTE: During the installation of this product, the only sealant or adhesive that is Manufacturer Approved is a 100% Silicone based product. Failure to use Kitchen and Bath 100% Silicone based products will VOID ALL manufacturer warranties and manufacturer finish warranties. Specifically, the use of Plumbers Putty is EXPRESSLY PROHIBITED and will VOID ALL manufacturer warranties and manufacturer finish warranties.

NOTE: The Oil Rubbed Bronze and Victorian Bronze finishes are living finishes and are simply cared for and cleaned with a mild soap and water. Any use of harsh chemicals found in some cleaning product will damage the finish and void the warranty. The use of liquid plumbing cleaners, bleach and some dental cleaning pastes with whitening agents may also damage these finishes.

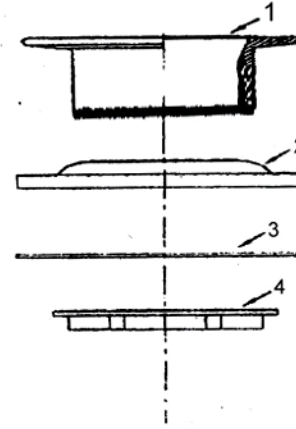

**Model # UM-4414**  
**Model # UM-4415**

MT760-series of Lavatory  
GRID STRAINER DRAIN  
INSTALLATION INSTRUCTIONS

NO	DESCRIPTION	MATERIAL
1.	FLANGE	BRASS
2.	GASKET	RUBBER
3.	FIBER WASHER	FIBER
4.	LOCK NUT	ZINC
5.	TUBE W/O OVERFLOW 1 1/4"OD BRASS 17GAUGE	BRASS

1. Unscrew flange (1) from drain body. Leave large black washer and all parts (2)(3)(4)(5).
2. Put a ring of silicone around drain opening in lavatory sink. Put pipe joint tape on threads end of pipe and insert threaded end of drain body up through drain hole and attach flange to body.
3. Thread up a lock nut(4) from the underside of the lavatory sink until the black rubber(2) washer is seated securely inside the opening of the lavatory sink. Tighten up locknut carefully wipe excess putty from around the edge of flange. Tighten lock nut(4)with a wrench.
4. Water test the entire installation by plugging the strainer with a small towel and lock for leakage. Please note: The leakage by the stopper is allowed. 3.78L/h at a pressure of 152mm(six in")water column, when closed
5. Tighten up at related connections